


CONSUMER INFORMATION

SERIAL NUMBER LOCATION

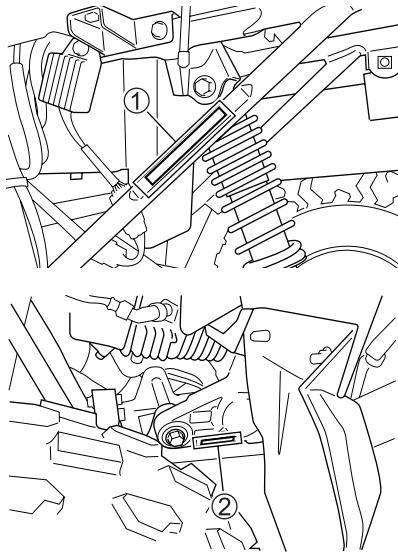

The frame number ① is stamped on the left side of the frame as shown in the illustration. The engine serial number ② is stamped on the left side of the crankcase assembly.

Write down the serial numbers here for your future reference.

Frame No.:

Engine No.:

LOCATION OF LABELS

Read and follow all of the warnings labeled on your ATV. Make sure you understand all of the labels. Keep the labels on the ATV. Do not remove them for any reason. If a label comes off or becomes difficult to read, you can get a replacement by contacting your Suzuki dealer.

